


Banda Coffee table

Natural

Black

Teulat


www.teulat.es

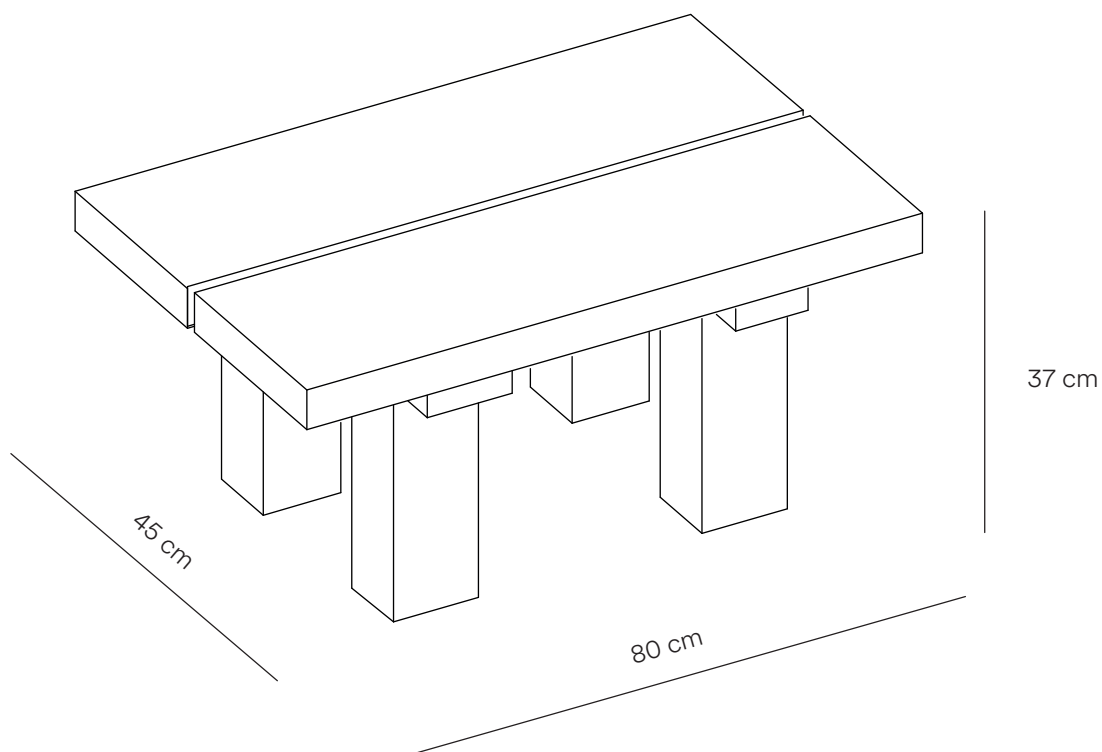


ATTENTION

- Before starting, carefully read the assembly instruction and prepare your working area.
- Save this document for future reference.


Needed for assembly

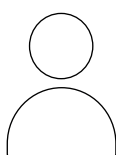


1 person

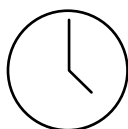

30 min

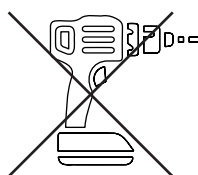

 Do not use power
screwdriver to assemble



Allen key
included

CAUTION

With a little care you can prolong the life of your furniture and keep the materials in good condition. Wood is a natural material, which may change in colour and will patinate over time. Always remove stains quickly before they can do any permanent damage to the furniture.

- Avoid placing the table in direct sunlight or near a heat source to reduce changes.
- When you move the furniture, make sure to lift it rather than pulling or pushing it to avoid damaging the floor, legs and mountings.
- Tighten up the screws after one to two months' use.
- Avoid improper use such as putting your feet on the table and standing on it.
- Use coasters under damp, hot or coloured objects to avoid permanent stains.
- Avoid covering the surface partially, for example with tablecloths or placemats, as colour variances may appear.
- Furniture containing wood-based panels (Particle board, fibreboard, plywood...) could emit pollutants on the air. Therefore, it is advisable to ventilate the furniture at least during four weeks after its assembly in order to reduce the exposure to the pollutants released by the furniture.



MADERA LACADA O TINTADA


- Limpie con un trapo limpio humedecido con agua o con una solución de agua y jabón neutro. Retire los residuos de jabón inmediatamente con un trapo limpio y seco.
- Si la superficie está rayada o tiene un aspecto mate, utilice un producto específico para el cuidado de madera lacada o teñida.
- Evitar el uso de detergentes que contengan silicona, ya que sellaría la mancha y dificultaría posteriores reparaciones.
- Evite el uso de estropajos o esponjas asperas, ya que pueden rayar la superficie.


BOIS LAQUÉ OU TEINTÉ

- Nettoyer avec un chiffon propre humidifié d'eau ou d'un mélange d'eau et de savon neutre. Retirez immédiatement les résidus de savon avec un chiffon propre et sec.
- Si la surface est rayée ou a un aspect mat, utiliser un produit spécifique pour l'entretien du bois laqué ou teinté.
- Évitez l'utilisation de détergents contenant du silicone, car cela scellerait la tâche et rendrait les réparations ultérieures plus difficiles.
- Évitez d'utiliser des tampons à récurer ou des éponges rugueuses, car ils peuvent rayer la surface.


LACQUERED OR STAINED WOOD

- Clean with a clean cloth wrung in water or in a solution of water and a neutral detergent. Remove soap residue immediately using a clean, dry cloth.
- If the surface is scratched or appears matt, use a care product suited especially for lacquered or stained wood.
- Avoid using detergents containing silicone, as that would seal the stain in and make subsequent repairs more difficult.
- Avoid using scouring cream or scouring pads, as they may scratch the surface.

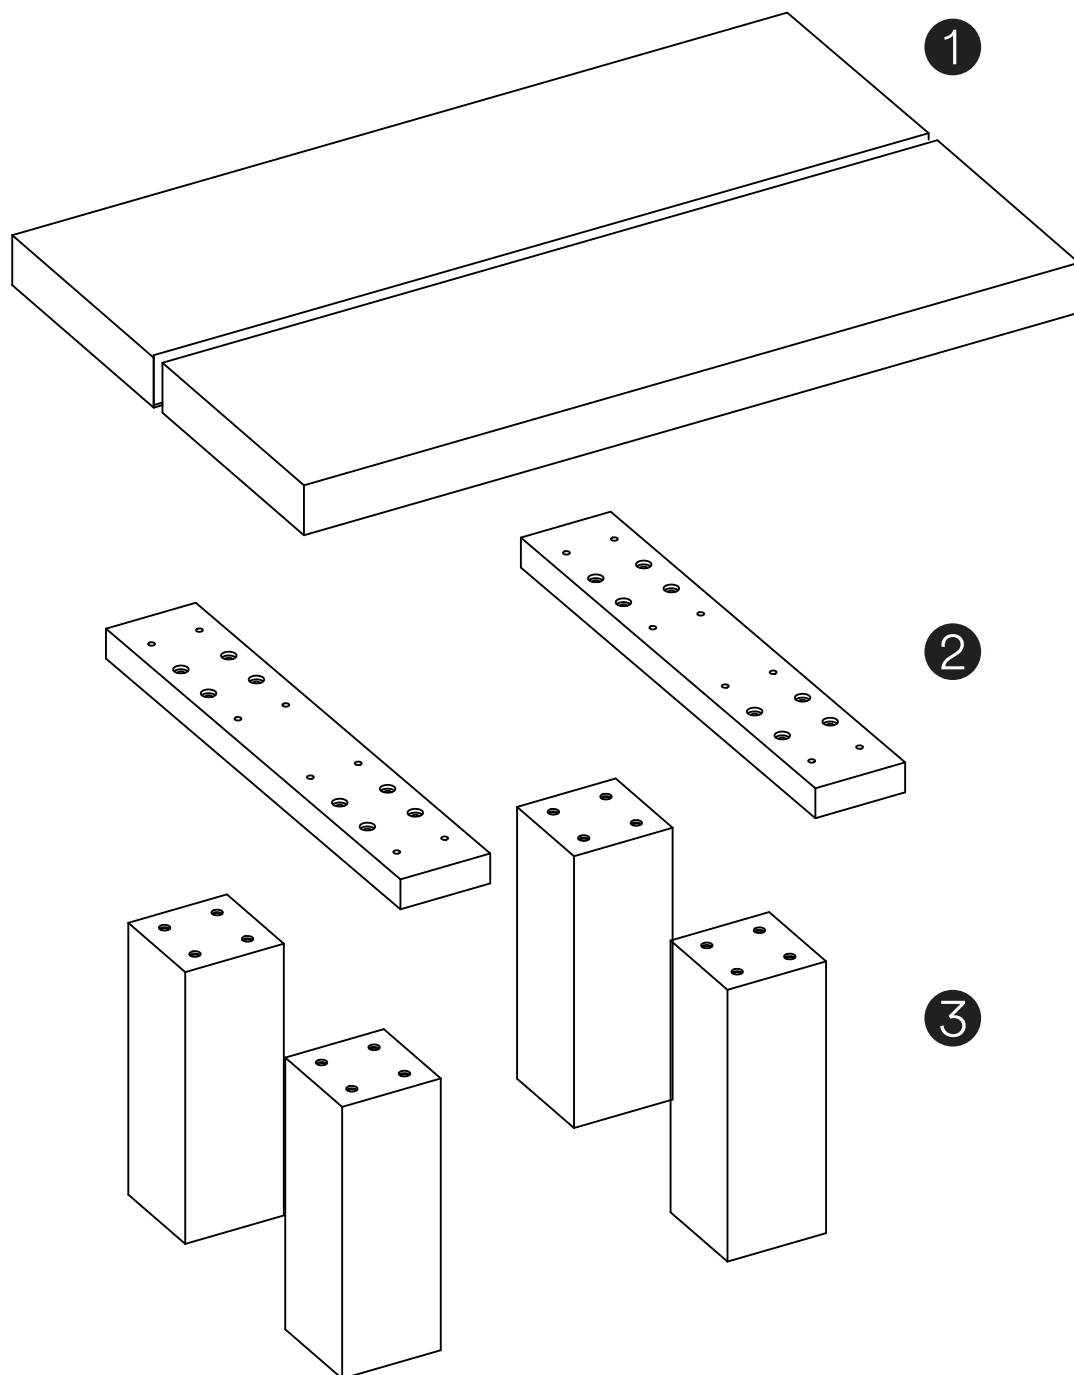


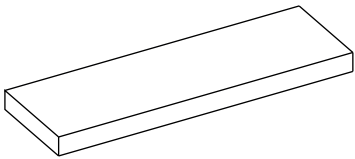


1 x 02 pc

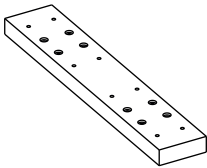


2 x 02 pc

 


3 x 04 pc

 



A x 32 pc

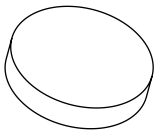

B x 16 pc

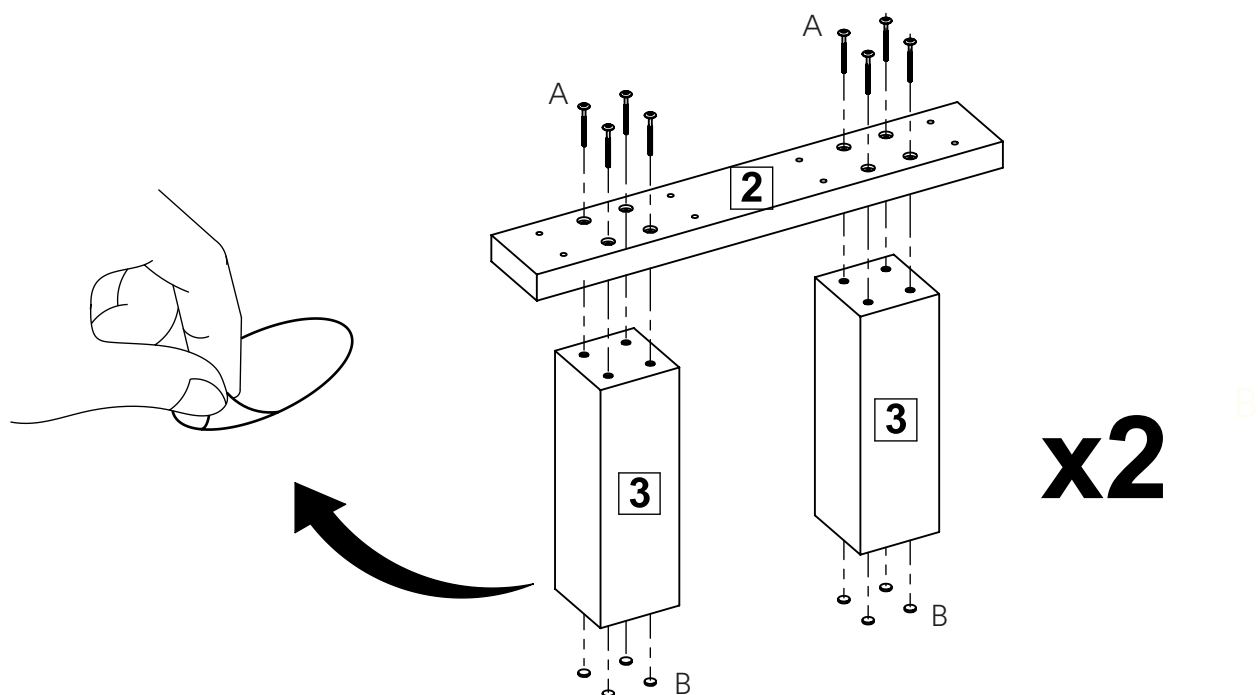

A		16	B		16
---	---	----	---	---	----

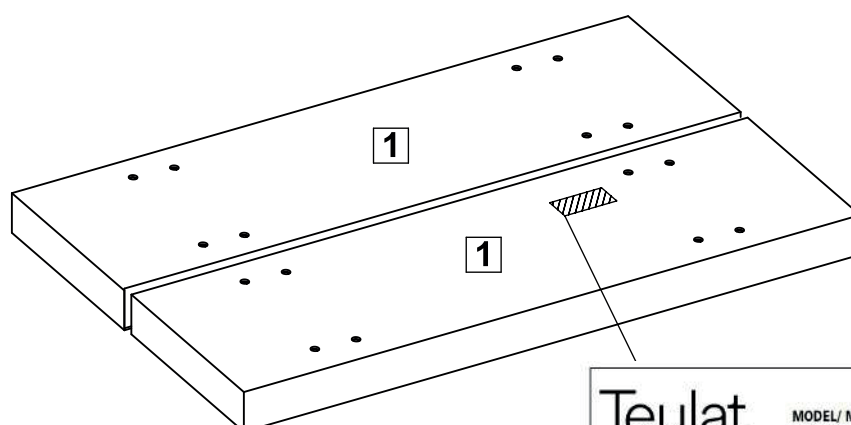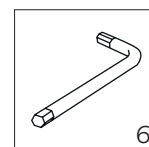

ES: En caso de reclamación, por favor, facilitar la información escrita en la etiqueta.

FR: En cas de réclamation, merci de transmettre les informations contenues sur l'étiquette fixée sur le produit.

EN: If you may have whatever complaint, please, let us know the information written on the label.

