 


PORTE

BATERÍA / Battery



Ref. 31100-



Ref. 31101-

 


FIG-1

Retirar la hembra y la goma de la rosca y fijar la varilla al pié roscandola al tornillo.
Remove the nut and the o-ring from the screw and fix the rod to the base by threading it onto the screw.

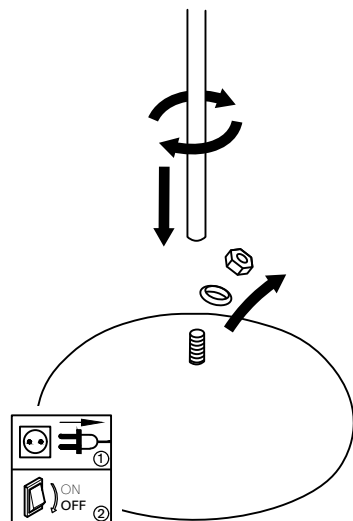


FIG-2

Sólo para modelo pié 31101-.
Only for floor model 31101-.

 


FIG-3

Colocar cabeza lumínica a la tija. Un leve giro facilita el encaje.
Attach light head to the rod. A slight twist makes it easier to fit.


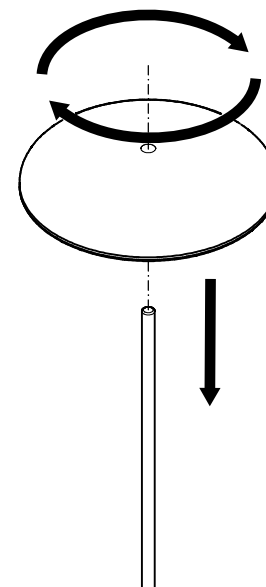


FIG-4


Retirar el adhesivo protector del botón. Antes de cargar, retirar y guardar el tapón de silicona del USB.
Remove the protective adhesive of the button. Before connecting the charger, remove and save the silicone plug from the USB connector.

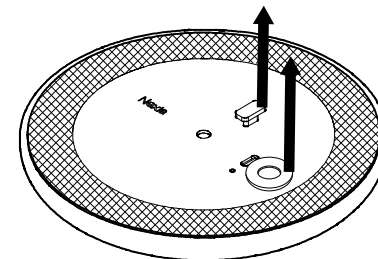

Para asegurar la protección IP del producto, vuelva a colocar el tapón del USB al finalizar la carga. / *To ensure the IP protection of the product, replace the plug of the USB when charging is complete.*

FIG-5

Conectar el cable USB suministrado a un cargador de 5V. Carga completa: 8h.
Connect the supplied USB wire to a 5V charger. Full charge: 8h.

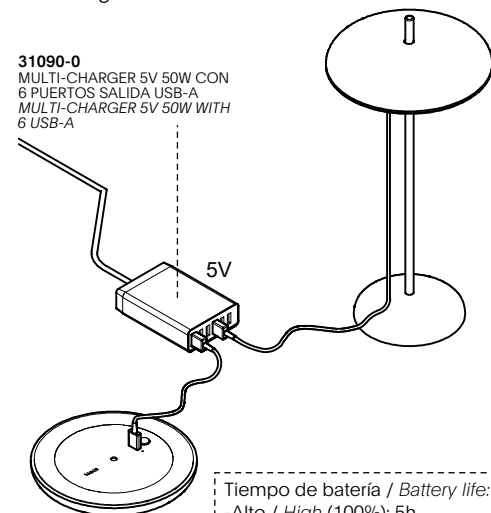

Tiempo de batería / *Battery life:*
-Alto / *High (100%): 5h*
-Medio / *Medium (50%): 10h*
-Bajo / *Low (25%): 30h*

FIG-6

No desplazar la cabeza lumínica tirando sólo de un lado.
Do not move the light head by pulling only on one side.


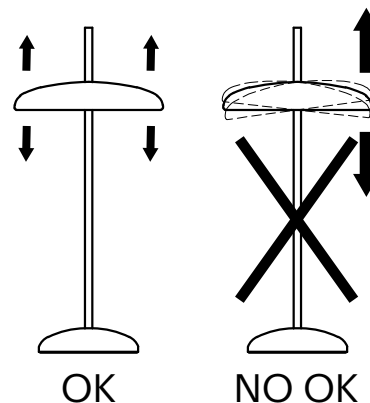


FIG-7

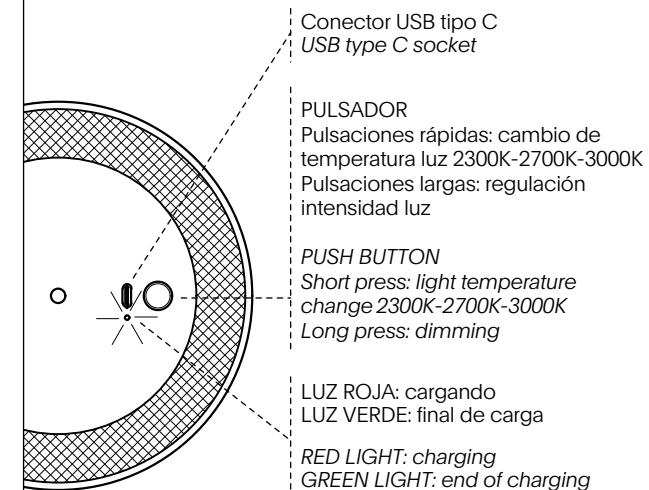

Nexia
Culture x light

Nexia Lighting
c.Priorat 14-20
Pol. Ind. Can Carner
08211 Castellar del Vallés
Barcelona - Spain
T +34 937 154 712
info@nexia.es
nexia.es