
NOVA LUCE


9009343

1

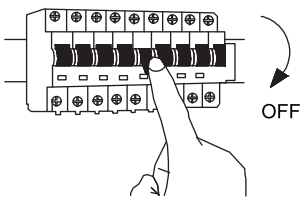


Turn off the general switch

2

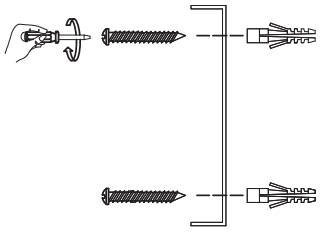


Drill holes, apply plastic anchors & screws

3

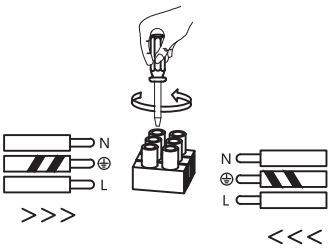


Connect the wires

4

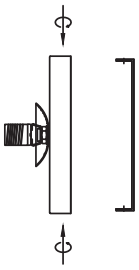


Apply the side screws

5

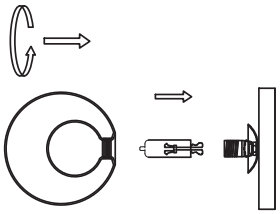


Install glass shades

6

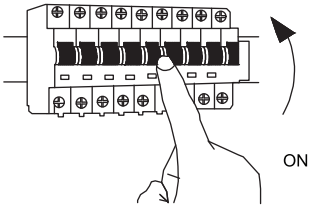

Turn on the general switch

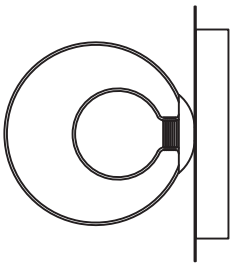

www.novaluce.com