



NOVA LUCE


9030500

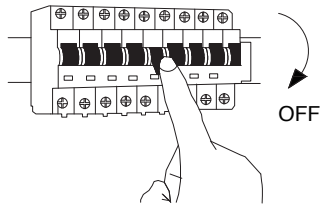


1. Turn off the general switch

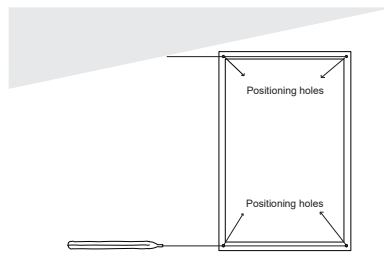


2. Mark with the guider

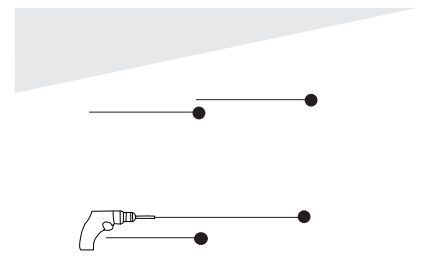


3. Make Holes

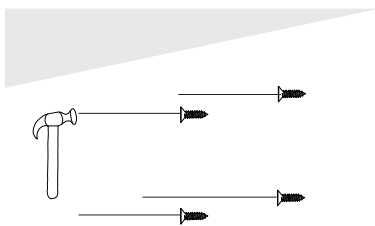


4. Apply Screws

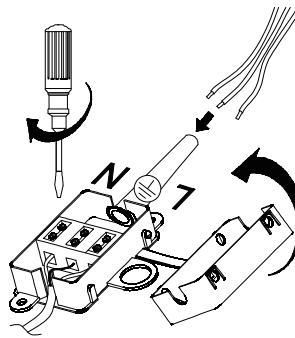

5. Connect the wires

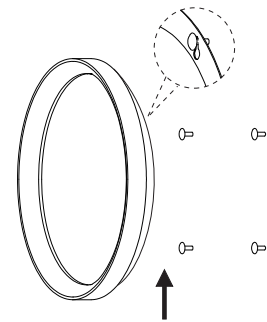

6. Hang it on

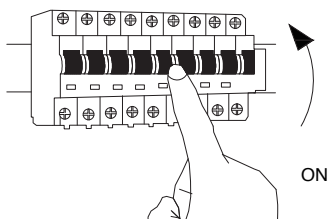

7 Turn on the general switch

