


# NOVA LUCE


9236214 9236215  
9236216

1

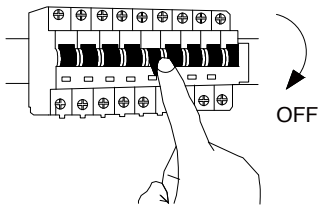


Turn off the general switch

2

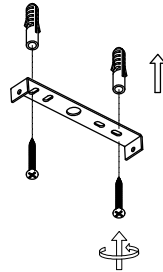


Drill holes & apply plastic anchors  
With screws

3

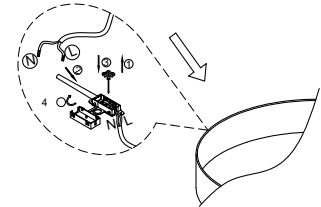


Connect the wires

4

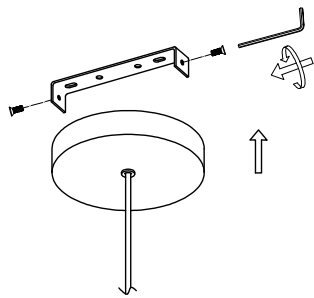


Apply the side screws

5

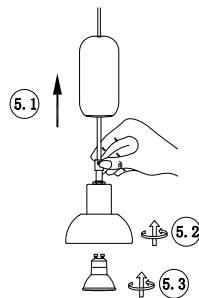


Apply the bulb with the screw

6

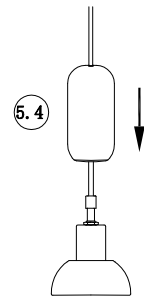

Apply the extra part

7

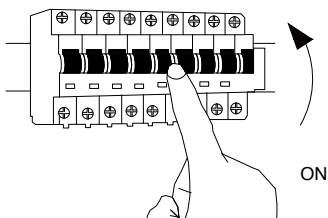

Turn on the general switch

